

---

# Ouster Sensor API Guide

*Firmware v2.3.0 for all Ouster sensors*

**Ouster**

**Apr 22, 2022**

# TCP and HTTP APIs

---

<b>1 TCP API</b>	<b>3</b>
1.1 Querying Sensor Info and Intrinsic Calibration . . . . .	3
1.2 Querying Active or Staged Parameters . . . . .	15
1.3 Setting Configuration Parameters . . . . .	18
<b>2 HTTP API Reference</b>	<b>23</b>
2.1 Sensor Metadata . . . . .	23
2.2 System . . . . .	30
2.3 Time . . . . .	34
2.4 Alerts, Diagnostics and Telemetry . . . . .	42
<b>3 API Changelog</b>	<b>46</b>

---

This on-sensor reference document is a quick guide to the TCP and HTTP APIs. For the most up-to-date and comprehensive information about your sensor, please see the sensor user manuals found at [www.ouster.com](http://www.ouster.com)

# 1 TCP API

---

## 1.1 Querying Sensor Info and Intrinsic Calibration

---

The sensor can be queried and configured using a simple plaintext protocol over TCP on port 7501.

An example session using the unix netcat utility is shown below. Note: "xxx" refers to the sensor serial number. The hostname of the sensor can look like "os-xxx" or "os1-xxx".

```
$ nc os-991900123456.local 7501
get_sensor_info

{"prod_line": "OS-1-128", "prod_pn": "840-103575-06", "prod_sn": "992139000666",
 "image_rev": "ousteros-image-prod-aries-v2.3.0-rc.1+20220319004702.staging", "build_rev": "v2.3.0-rc.1",
 "build_date": "2022-03-18T20:00:29Z", "status": "RUNNING", "initialization_id": 9599936, "base_pn": "",
 "base_sn": "", "proto_rev": ""}
```

A sensor may have one of the following statuses:

Table 1: Sensor Status

Status	Description
INITIALIZING	When the sensor is booting and not yet outputting data
WARMUP	Sensor has gone into thermal warmup state
UPDATING	When the sensor is updating the FPGA firmware on the first reboot after a firmware upgrade
RUNNING	When the sensor has reached the final running state where it can output data
STANDBY	The sensor has been configured into a low-power state where sensor is on but not spinning
ERROR	Check error codes in the <b>errors</b> field for more information
UNCONFIGURED	An error with factory calibration that requires a manual power cycle or reboot

---

**Note:** If the sensor is set to **STANDBY** mode some of these commands will not return the expected values.

---

If the sensor is in an **ERROR** or **UNCONFIGURED** state, please contact [Ouster support](#) with the diagnostic file found at <http://os-9919xxxxxxx/diag> for support.

The following commands will return sensor configuration and calibration information:

---

**Note:** If the sensor is set to **STANDBY** mode some of these commands will not return the expected

values.

Table2: Sensor Configuration and Calibration

Command	Description	Response Example
<code>get_config_param</code> <code>&lt;active/staged&gt;</code>	Returns all active or staged JSON-formatted sensor configuration. Note: The <code>get_config_param active</code> command is functionally the same as the deprecated command <code>get_config_txt</code> .	<pre>{   "udp_ip": "169.254.175.254",   "udp_dest": "169.254.175.254",   "udp_port_lidar": 7502,   "udp_port_imu": 7503,   "udp_profile_lidar": "RNG19_RFL8_SIG16_NIR16_ ↔DUAL",   "udp_profile_imu": "LEGACY",   "columns_per_packet": 16,   "timestamp_mode": "TIME_FROM_INTERNAL_OSC",   "sync_pulse_in_polarity": "ACTIVE_HIGH",   "nmea_in_polarity": "ACTIVE_HIGH",   "nmea_ignore_valid_char": 0,   "nmea_baud_rate": "BAUD_9600",   "nmea_leap_seconds": 0,   "multipurpose_io_mode": "OFF",   "sync_pulse_out_polarity": "ACTIVE_HIGH",   "sync_pulse_out_frequency": 1,   "sync_pulse_out_angle": 360,   "sync_pulse_out_pulse_width": 10,   "auto_start_flag": 1,   "operating_mode": "NORMAL",   "lidar_mode": "1024x10",   "azimuth_window": [90000, 270000],   "signal_multiplier": 1,   "phase_lock_enable": false,   "phase_lock_offset": 0 }</pre>
<code>get_sensor_info</code>	Returns JSON-formatted sensor metadata: serial number, hardware and software revision, and sensor status.	<pre>{   "prod_line": "OS-1-128",   "prod_pn": "840-103575-06",   "prod_sn": "992139000666",   "image_rev": "ousteros-image-prod-aries-v2.3. ↔0-rc.1+20220319004702.staging",   "build_rev": "v2.3.0-rc.1",   "build_date": "2022-03-18T20:00:29Z",   "status": "RUNNING",   "initialization_id": 9599936,   "base_pn": "",   "base_sn": "",   "proto_rev": "" }</pre>

continues on next page

Table 2 - continued from previous page

Command	Description	Response Example
<code>get_time_info</code>	Returns JSON-formatted sensor timing configuration and status of <code>udp_timestamp</code> , <code>sync_pulse_in</code> , and <code>multipurpose_io</code> .	<pre> {   "timestamp":   {     "time": 3709.04727264,     "mode": "TIME_FROM_INTERNAL_OSC",     "time_options":     {       "ptp_1588": 3718,       "sync_pulse_in": 1,       "internal_osc": 3709     }   },   "sync_pulse_in":   {     "locked": 0,     "polarity": "ACTIVE_HIGH",     "diagnostics":     {       "last_period_nsec": 0,       "count": 1,       "count_unfiltered": 0     }   },   "multipurpose_io":   {     "mode": "OFF",     "sync_pulse_out":     {       "polarity": "ACTIVE_HIGH",       "frequency_hz": 1,       "angle_deg": 360,       "pulse_width_ms": 10     }   }, }                     </pre>

continues on next page

Table 2 - continued from previous page

Command	Description	Response Example
get_time_info	**Continued from previous page**	<pre> "nmea": {   "locked": 0,   "polarity": "ACTIVE_HIGH",   "ignore_valid_char": 0,   "baud_rate": "BAUD_9600",   "leap_seconds": 0,   "diagnostics":   {     "decoding":     {       "utc_decoded_count": 0,       "date_decoded_count": 0,       "not_valid_count": 0,       "last_read_message": ""     },     "io_checks":     {       "start_char_count": 0,       "char_count": 0,       "bit_count": 1,       "bit_count_unfiltered": 0     }   } } </pre>

continues on next page

Table 2 - continued from previous page

Command	Description	Response Example
<code>get_beam_intrinsics</code>	<p>Returns JSON-formatted beam altitude and azimuth offsets, in degrees. Length of arrays is equal to the number of channels in the sensor. Also returns distance between lidar origin and beam origin in mm, to be used for point cloud calculations.</p>	<pre>{   "beam_altitude_angles": [21.01, 20.72, 20.42,     20.1, 19.79, 19.48, 19.17,     18.84, 18.55, 18.22, 17.9, 17.6,     17.27, 16.96, 16.65, 16.32, 15.97,     15.65, 15.34, 15.01, 14.67, 14.35,     14.01, 13.68, 13.33, 13.02, 12.67,     12.34, 11.99, 11.65, 11.33, 10.98,     10.64, 10.28, 9.949999999999999,     9.609999999999999, 9.27, 8.92, 8.57,     8.23, 7.88, 7.54, 7.18, 6.84, 6.47,     6.13, 5.78, 5.45, 5.09, 4.73,     4.41, 4.05, 3.69, 3.32, 2.98,     2.63, 2.27, 1.93, 1.57, 1.22,     0.85, 0.5, 0.15, -0.19, -0.55, -0.92,     -1.25, -1.63, -1.98, -2.31, -2.67,     -3.04, -3.4, -3.74, -4.09, -4.45, -4.8,     -5.15, -5.5, -5.87, -6.21, -6.57, -6.91,     -7.25, -7.62, -7.95, -8.300000000000001,     -8.65, -9.01, -9.35, -9.69, -10.05,     -10.39, -10.74, -11.09, -11.42, -11.77,     -12.11, -12.45, -12.8, -13.14, -13.47,     -13.81, -14.15, -14.48, -14.82, -15.13,     -15.47, -15.81, -16.15, -16.48, -16.8,     -17.15, -17.48, -17.79, -18.12, -18.47,     -18.77, -19.09, -19.42, -19.73, -20.06,     -20.36, -20.69, -21, -21.32, -21.62, -21.94],   "beam_azimuth_angles": [4.23, 1.41, -1.4,     -4.21, 4.22, 1.42, -1.41, -4.22, 4.23,     1.41, -1.42, -4.21, 4.23, 1.42, -1.4,     -4.2, 4.23, 1.41, -1.39, -4.21, 4.25,     1.43, -1.41, -4.22, 4.24, 1.44, -1.41,     -4.22, 4.23, 1.42, -1.38, -4.22, 4.24,     1.42, -1.4, -4.23, 4.26, 1.44, -1.41,     -4.23, 4.24, 1.44, -1.41, -4.23, 4.24,     1.42, -1.41, -4.24, 4.25, 1.42, -1.39,     -4.22, 4.25, 1.41, -1.4, -4.23, 4.24,     1.43, -1.41, -4.23, 4.24, 1.42, -1.41,     -4.23, 4.25, 1.42, -1.4, -4.24, 4.24,     1.44, -1.4, -4.24, 4.24, 1.43, -1.4, -4.24,     4.25, 1.43, -1.41, -4.24, 4.25, 1.42, -1.42,     -4.22, 4.24, 1.43, -1.4, -4.24, 4.25, 1.44,     -1.41, -4.24, 4.25, 1.42, -1.41, -4.24,     4.25, 1.42, -1.41, -4.25, 4.26, 1.43, -1.41,     -4.26, 4.27, 1.43, -1.4, -4.24, 4.25, 1.43,     -1.4, -4.24, 4.26, 1.42, -1.4, -4.25, 4.26,     1.43, -1.41, -4.26, 4.26, 1.42, -1.42,     -4.26, 4.25, 1.42, -1.42, -4.27],   "lidar_origin_to_beam_origin_mm": 15.806 }</pre>

continues on next page

Table 2 - continued from previous page

Command	Description	Response Example
<code>get_imu_intrinsics</code>	Returns JSON-formatted IMU transformation matrix needed to transform to the Sensor Coordinate Frame.	<pre>{   "imu_to_sensor_transform":   [     1, 0, 0, 6.253, 0, 1, 0, -11.775,     0, 0, 1, 7.645, 0, 0, 0, 1   ] }</pre>
<code>get_lidar_intrinsics</code>	Returns JSON-formatted lidar transformation matrix needed to transform to the Sensor Coordinate Frame.	<pre>{   "lidar_to_sensor_transform":   [     -1, 0, 0, 0, 0, -1, 0, 0, 0, 0,     1, 36.18, 0, 0, 0, 0, 1   ] }</pre>
<code>get_alerts</code> <START_CURSOR>	<p>Returns JSON-formatted sensor diagnostic information.</p> <p>The <code>log</code> list contains alerts when they were activated or deactivated. An optional <code>START_CURSOR</code> argument specifies where the log should start.</p> <p>The <code>active</code> list contains all currently active alerts.</p>	<pre>{   "log":   [     {       "active": true,       "category": "UDP_TRANSMISSION",       "cursor": 0,       "id": "0x01000018",       "level": "WARNING",       "msg": "Client machine announced             it is not reachable on the             provided not reachable on             IMU data port; check that             udp_dest and udp_port_imu             configured on the sensor matches             client IP and port.",       "msg_verbose": "Failed to send             imu UDP data to destination             host 169.254.175.254:7503",       "realtime": "39850161524"     }   ], }</pre>

continues on next page



Table 2 - continued from previous page

Command	Description	Response Example
<pre>get_alerts &lt;START_CURSOR&gt;</pre>	<p><b>**Continued from previous page**</b></p>	<pre>{   "active": true,   "category": "UDP_TRANSMISSION",   "cursor": 1,   "id": "0x01000015",   "level": "WARNING",   "msg": "Client machine announced it is not reachable on the provided lidar data port; check that udp_dest and udp_port_lidar configured on the sensor matches client IP and port.",   "msg_verbose": "Failed to send lidar UDP data to destination host 169.254.175.254:7502",   "realtime": "40842065146" }, {   "active": true,   "category": "ETHERNET_LINK_BAD",   "cursor": 2,   "id": "0x01000011",   "level": "WARNING",   "msg": "Ethernet link bad, please check network switch and harnessing can support 1 Gbps Ethernet.",   "msg_verbose": "Link transitioned to 0/Unknown",   "realtime": "414257307390" }, {   "active": true,   "category": "ETHERNET_LINK_BAD",   "cursor": 2,   "id": "0x01000011",   "level": "WARNING",   "msg": "Ethernet link bad, please check network switch and harnessing can support 1 Gbps Ethernet.",   "msg_verbose": "Link transitioned to 0/Unknown",   "realtime": "414257307390" },</pre>

continues on next page

Table 2 - continued from previous page

Command	Description	Response Example
<pre>get_alerts &lt;START_CURSOR&gt;</pre>	<p>*Continues from previous page.*</p>	<pre>{   "active": true,   "category": "UDP_TRANSMISSION",   "cursor": 3,   "id": "0x01000016",   "level": "WARNING",   "msg": "Could not send lidar data         UDP packet to host; check that         network is up.",   "msg_verbose": "Failed to send         lidar UDP data to destination         host 169.254.175.254:7502",   "realtime": "414261086316" }, {   "active": true,   "category": "UDP_TRANSMISSION",   "cursor": 4,   "id": "0x01000019",   "level": "WARNING",   "msg": "Could not send IMU UDP         packet to host; check         that network is up.",   "msg_verbose": "Failed to send imu         UDP data to destination         host 169.254.175.254:7503",   "realtime": "414266339945" }, {   "active": false,   "category": "ETHERNET_LINK_BAD",   "cursor": 5,   "id": "0x01000011",   "level": "WARNING",   "msg": "Ethernet link bad,         please check network switch         and harnessing can support         1 Gbps Ethernet.",   "msg_verbose": "Link transitioned         to 1000/Full",   "realtime": "416337486469" } ],</pre>

continues on next page

Table 2 - continued from previous page

Command	Description	Response Example
<pre>get_alerts &lt;START_CURSOR&gt;</pre>	<p>*Continues from previous page.*</p>	<pre>"next_cursor": 6, "active": [   {     "active": true,     "category": "UDP_TRANSMISSION",     "cursor": 1,     "id": "0x01000015",     "level": "WARNING",     "msg": "Client machine announced            it is not reachable on the            provided lidar data port;            check that udp_dest and            udp_port_lidar configured            on the sensor matches            client IP and port.",     "msg_verbose": "Failed to send                    lidar UDP data to destination                    host 169.254.175.254:7502",     "realtime": "40842065146"   },   {     "active": true,     "category": "UDP_TRANSMISSION",     "cursor": 3,     "id": "0x01000016",     "level": "WARNING",     "msg": "Could not send lidar data            UDP packet to host;            check that network is up.",     "msg_verbose": "Failed to send                    lidar UDP data to destination                    host 169.254.175.254:7502",     "realtime": "414261086316"   }, ]</pre>

continues on next page

Table 2 - continued from previous page

Command	Description	Response Example
<pre>get_alerts &lt;START_CURSOR&gt;</pre>	<p>*Continues from previous page.*</p>	<pre>{   "active": true,   "category": "UDP_TRANSMISSION",   "cursor": 0,   "id": "0x01000018",   "level": "WARNING",   "msg": "Client machine announced          it is not reachable on the provided          not reachable on IMU data port;          check that udp_dest and          udp_port_imu configured on the          sensor matches client IP          and port.",   "msg_verbose": "Failed to send imu                  UDP data to destination host                  169.254.175.254:7503",   "realtime": "39850161524" }, {   "active": true,   "category": "UDP_TRANSMISSION",   "cursor": 4,   "id": "0x01000019",   "level": "WARNING",   "msg": "Could not send IMU UDP          packet to host; check that          network is up.",   "msg_verbose": "Failed to send                  imu UDP data to destination                  host 169.254.175.254:7503",   "realtime": "414266339945" } ] }</pre>

continues on next page



Table 2 - continued from previous page

Command	Description	Response Example
<code>get_lidar_data_format</code> *Continues from previous page.*	<p><code>udp_profile_lidar</code> - Lidar data profile format [Default LEGACY].</p> <p><code>udp_profile_lidar</code> - Lidar data profile format [Default LEGACY].</p> <p><code>udp_profile_imu</code> - IMU data profile format [Default LEGACY].</p> <p><b>NOTE:</b> This command only works when the sensor is in <b>RUNNING</b> status.</p>	
<code>get_calibration_status</code>	Returns JSON-formatted calibration status of the sensor reflectivity. <code>valid</code> : true/false depending on calibration status. <code>timestamp</code> : if valid is true; time at which the calibration was completed.	<pre>{   "reflectivity":   {     "valid": true,     "timestamp": "2021-10-05T00:02:36"   } }</pre>
<code>get_telemetry</code>	Returns JSON-formatted response that provides sensor system state information. This includes the FPGA <b>Timestamp</b> in <code>ns</code> (Nanoseconds) at which the information was collected from the FPGA, <b>Lidar Input Voltage</b> in <code>mv</code> (Millivolt), <b>Lidar Input Current</b> in <code>ma</code> (Milliamp), <b>Internal Temperature</b> of the sensor in <code>°C</code> (Degree Celsius) and <b>Phase Lock status</b> namely <code>LOCKED</code> , <code>LOST</code> , <code>DISABLED</code> .	<pre>{   "input_current_ma": 758,   "input_voltage_mv": 23606,   "internal_temperature_deg_c": 45,   "phase_lock_status": "DISABLED",   "timestamp_ns": 2962666299310 }</pre>

---

**Note:** Using `get_telemetry`, Internal temperature can only be measured with **Rev 06** and above sensors.

---



---

**Note:** **Phase lock** output will not indicate loss of lock if the PTP source is lost.

---

## 1.2 Querying Active or Staged Parameters

Sensor configurations and operating modes can also be queried over TCP. Below is the command format:

`get_config_param active <parameter>` will return the current active configuration parameter values.

`get_config_param staged <parameter>` will return the parameter values that will take place after issuing a `reinitialize` command or after sensor reboot.

**Warning:** The command `get_config_txt` is deprecated and superseded by `get_config_param active`, which provides the same response. `get_config_txt` will be removed in a future firmware.

An example session using the unix netcat utility is shown below:

```
$ nc os-991900123456 7501
get_config_param active lidar_mode
1024x10
```

The following commands will return sensor active or staged configuration parameters:

Table3: Sensor Configurations

<code>get_config_param</code>	Command Description	Response
<code>udp_dest</code>	Returns the destination to which the sensor sends UDP traffic. Note: <code>udp_ip</code> is the deprecated parameter name whose value will always be the same as <code>udp_dest</code> .	"" (default)
<code>udp_port_lidar</code>	Returns the port number of lidar UDP data packets.	7502 (default)
<code>udp_port_imu</code>	Returns the port number of IMU UDP data packets.	7503 (default)
<code>sync_pulse_in_polarity</code>	Returns the polarity of the SYNC_PULSE_IN input, which controls polarity of SYNC_PULSE_IN pin when timestamp_mode is set in TIME_FROM_SYNC_PULSE_IN. Use ACTIVE_HIGH if PPS is active high, idle low.	Either ACTIVE_HIGH (default) or ACTIVE_LOW

continues on next page

Table 3 - continued from previous page

<b>get_config_param</b>	<b>Command Description</b>	<b>Response</b>
<code>sync_pulse_out_polarity</code>	Returns the polarity of SYNC_PULSE_OUT output, if the sensor is using this for time synchronization.	Either <code>ACTIVE_HIGH</code> or <code>ACTIVE_LOW</code> (default)
<code>sync_pulse_out_frequency</code>	Returns the output SYNC_PULSE_OUT pulse rate in Hz.	<code>1</code> (default)
<code>sync_pulse_out_angle</code>	Returns the angle in terms of degrees that the sensor traverses between each SYNC_PULSE_OUT pulse. E.g. a value of 180 means a sync pulse is sent out every 180° for a total of two pulses per revolution and angular frequency of 20 Hz if the sensor is 1024x10 Hz lidar mode.	<code>360</code> (default)
<code>sync_pulse_out_pulse_width</code>	Returns the output SYNC_PULSE_OUT pulse width in ms.	<code>10</code> (default)
<code>nmea_in_polarity</code>	Returns the polarity of NMEA UART input messages. See Time Synchronization section in sensor user manual for NMEA use case. Use <code>ACTIVE_HIGH</code> if UART is active high, idle low, and start bit is after a falling edge.	Either <code>ACTIVE_HIGH</code> (default) or <code>ACTIVE_LOW</code>
<code>nmea_ignore_valid_char</code>	Returns <code>0</code> if NMEA UART input \$GPRMC messages should be ignored if valid character is not set, and <code>1</code> if messages should be used for time syncing regardless of the valid character.	Either <code>0</code> (default) or <code>1</code>
<code>nmea_baud_rate</code>	Returns <code>BAUD_9600</code> (default) or <code>BAUD_115200</code> for the expected baud rate the sensor is attempting to decode for NMEA UART input \$GPRMC messages.	Either <code>BAUD_9600</code> or <code>BAUD_115200</code>

continues on next page



Table 3 - continued from previous page

<b>get_config_param</b>	<b>Command Description</b>	<b>Response</b>
<code>nmea_leap_seconds</code>	Returns the number of leap seconds that will be added to the UDP timestamp when calculating seconds since 00:00:00 Thursday, 1 January 1970. For Unix Epoch time, this should be set to <code>0</code> .	Either <code>0</code> (default) or a positive integer
<code>azimuth_window</code>	Returns the visible region of interest of the sensor in millidegrees. Only data within the specified bounds of the region of interest is sent from the sensor.	<code>[0,360000]</code> (defaults to an azimuth window of 360°)
<code>signal_multiplier</code>	Returns the value that the <code>signal_multiplier</code> is configured. By default the sensor has a signal multiplier value of <code>1</code> .	Either <code>1</code> (default) or <code>2</code> or <code>3</code>
<code>udp_profile_lidar</code>	Returns the configuration of the LIDAR data packets. Valid values are <code>LEGACY [Default]</code> , <code>RNG19_RFL8_SIG16_NIR16</code> , <code>RNG19_RFL8_SIG16_NIR16_DUAL</code> , <code>RNG15_RFL8_NIR8</code>	<code>LEGACY</code>
<code>udp_profile_imu</code>	Returns the configuration of the IMU data packets. Valid value is <code>LEGACY</code>	<code>LEGACY</code>
<code>phase_lock_enable</code>	Returns whether phase locking is enabled.	Either <code>false</code> (default) or <code>true</code>
<code>phase_lock_offset</code>	Returns the angle in the Lidar Coordinate Frame that sensors are locked to in millidegrees if phase locking is enabled.	Integer between <code>0</code> and <code>360000</code> inclusive
<code>lidar_mode</code>	Returns a string indicating the horizontal resolution and rotation frequency [Hz].	One of <code>512x10</code> , <code>1024x10</code> , <code>2048x10</code> , <code>512x20</code> , or <code>1024x20</code>
<code>timestamp_mode</code>	Returns the method used to timestamp measurements.	One of <code>TIME_FROM_INTERNAL_OSC</code> , <code>TIME_FROM_PTP_1588</code> , or <code>TIME_FROM_SYNC_PULSE_IN</code>

continues on next page

Table 3 - continued from previous page

<b>get_config_param</b>	<b>Command Description</b>	<b>Response</b>
<code>multipurpose_io_mode</code>	Returns the configured mode of the MULTIPURPOSE_IO pin. See Time Synchronization section in sensor user manual for a detailed description of each option.	One of <b>OFF</b> (default), <b>INPUT_NMEA_UART</b> , <b>OUTPUT_FROM_INTERNAL_OSC</b> , <b>OUTPUT_FROM_SYNC_PULSE_IN</b> , <b>OUTPUT_FROM_PTP_1588</b> , or <b>OUTPUT_FROM_ENCODER_ANGLE</b>
<code>operating_mode</code>	Returns the operating mode that the sensor is in. <b>NORMAL</b> is the default value. <b>STANDBY</b> is a low power (5W) operating mode. Note: <code>auto_start_flag</code> is soon to be deprecated parameter name where <code>auto_start_flag 0</code> is equivalent to <code>operating_mode STANDBY</code> and <code>auto_start_flag 1</code> is equivalent to <code>operating_mode NORMAL</code> .	Either <b>NORMAL</b> (default) or <b>STANDBY</b> (low power/standby state)

### 1.3 Setting Configuration Parameters

`set_config_param <parameter> <value>` will set new values for configuration parameters, which will take effect after issuing the `reinitialize` command or after sensor reset.

`reinitialize` will reinitialize the sensor so the staged values of the parameters will take effect immediately.

`save_config_params` will write new values of active parameters into a configuration file, so they will persist after sensor reset. In order to permanently change a parameter in the configuration file, first use `set_config_param` to update the parameter in a staging area, then use `reinitialize` to make that parameter active. Only after the parameter is made active will `save_config_params` capture it to persist after reset.

**Warning:** The command `write_config_txt` will be deprecated in a future firmware. The command `save_config_params` provides the same response.

While in **STANDBY** mode, we can set the config parameters, but it will not take effect until we switch the sensor back to **NORMAL** mode.

`set_udp_dest_auto` will automatically determine the sender's IP address at the time the command was sent, and set it as the destination of UDP traffic. This takes effect after issuing a `reinitialize` command. Using this command has the same effect as using `set_config_param udp_dest <ip address>`.

An example session using the unix netcat utility is shown below.

**Note:** In the example below, to distinguish between the command and expected response, a dash has been added before the expected response. The actual response will be without the dash.

```
$ nc os-991900123456 7501
set_config_param lidar_mode 512x20
-set_config_param
set_udp_dest_auto
-set_udp_dest_auto
reinitialize
-reinitialize
save_config_params
-save_config_params
```

The following commands will set sensor configuration parameters:

**Note:** Each of the following commands have two responses: \* `set_config_param` on Success \* `error:` Otherwise

Table4: Setting Config Parameters

set_config_param	Command Description
<code>udp_dest &lt;destination&gt;</code>	Set the <destination> to which the sensor sends UDP traffic. On boot, the sensor will not output data until this is set. If the IP address is not known, this can also be accomplished with the <code>set_udp_dest_auto</code> command (details above). The sensor supports unicast, IPv4 broadcast (255.255.255.255), IPv4 multicast (239.x.x.x), and IPv6 multicast (ff02::01) addresses. Note: <code>udp_ip</code> is the deprecated parameter name. However during the deprecation phase, either <code>udp_ip</code> or <code>udp_dest</code> may be used. When either one is updated, the other parameter value will be updated to match upon setting the parameter value.
<code>udp_port_lidar &lt;port&gt;</code>	Set the <port> on <code>udp_dest</code> to which lidar data will be sent (7502, default).
<code>udp_port_imu &lt;port&gt;</code>	Set the <port> on <code>udp_dest</code> to which IMU data will be sent (7503, default).
<code>sync_pulse_in_polarity &lt;ACTIVE_HIGH/ACTIVE_LOW&gt;</code>	Set the polarity of SYNC_PULSE_IN input, which controls polarity of SYNC_PULSE_IN pin when timestamp_mode is set in <code>TIME_FROM_SYNC_PULSE_IN</code> .
<code>sync_pulse_out_polarity &lt;ACTIVE_HIGH/ACTIVE_LOW&gt;</code>	Set the polarity of SYNC_PULSE_OUT output, if the sensor is set as the master sensor used for time synchronization.

continues on next page

Table 4 - continued from previous page

<b>set_config_param</b>	<b>Command Description</b>
<code>sync_pulse_out_frequency &lt;rate in Hz&gt;</code>	Set output SYNC_PULSE_OUT rate. Valid inputs are integers >0 Hz, but also limited by the criteria described in the Time Synchronization section of the Firmware User Manual.
<code>sync_pulse_out_angle &lt;angle in deg&gt;</code>	Set output SYNC_PULSE_OUT rate defined by rotation angle. E.g. a value of 180 means a sync pulse is sent out every 180° for a total of two pulses per revolution and angular frequency of 20 Hz if the sensor is 1024x10 Hz lidar mode. Valid inputs are integers between 0 and 360 inclusive but also limited by the criteria described in the Time Synchronization section of Firmware User Manual.
<code>sync_pulse_out_pulse_width &lt;width in ms&gt;</code>	Set output SYNC_PULSE_OUT pulse width in ms, in 1 ms increments. Valid inputs are integers greater than 0 ms, but also limited by the criteria described in the Time Synchronization section of Firmware User Manual.
<code>nmea_in_polarity &lt;ACTIVE_HIGH/ ACTIVE_LOW&gt;</code>	Set the polarity of NMEA UART input \$GPRMC messages. See Time Synchronization section in sensor user manual for NMEA use case. Use <b>ACTIVE_HIGH</b> if UART is active high, idle low, and start bit is after a falling edge.
<code>nmea_ignore_valid_char &lt;1/0&gt;</code>	Set <b>0</b> if NMEA UART input \$GPRMC messages should be ignored if valid character is not set, and <b>1</b> if messages should be used for time syncing regardless of the valid character.
<code>nmea_baud_rate &lt;rate in baud/s&gt;</code>	Set <b>BAUD_9600</b> (default) or <b>BAUD_115200</b> for the expected baud rate the sensor is attempting to decode for NMEA UART input \$GPRMC messages.
<code>nmea_leap_seconds &lt;s&gt;</code>	Set an integer number of leap seconds that will be added to the UDP timestamp when calculating seconds since 00:00:00 Thursday, 1 January 1970. For Unix Epoch time, this should be set to <b>0</b> .
<code>azimuth_window &lt;[min_bound_millideg, max_bound_millideg]&gt;</code>	Set the visible region of interest of the sensor in millidegrees. Only data from within the specified azimuth window bounds is sent.
<code>phase_lock_enable &lt;true/false&gt;</code>	Set whether phase locking is enabled. See Firmware User Manual for more details on using phase lock.
<code>phase_lock_offset &lt;angle in millideg&gt;</code>	Set the angle in the Lidar Coordinate Frame that sensors are locked to in millidegrees if phase locking is enabled. Angle is traversed at the top of the second.

continues on next page

Table 4 - continued from previous page

<b>set_config_param</b>	<b>Command Description</b>
<code>lidar_mode &lt;mode&gt;</code>	Set the horizontal resolution and rotation rate of the sensor. Valid modes are <code>512x10</code> , <code>1024x10</code> , <code>2048x10</code> , <code>512x20</code> , and <code>1024x20</code> . The effective range of the sensor is increased by 15-20% for every halving of the number of points gathered e.g. <code>512x10</code> has 15-20% longer range than <code>512x20</code> .
<code>timestamp_mode &lt;mode&gt;</code>	Set the method used to timestamp measurements. Valid modes are <code>TIME_FROM_INTERNAL_OSC</code> , <code>TIME_FROM_SYNC_PULSE_IN</code> , or <code>TIME_FROM_PTP_1588</code> .
<code>multipurpose_io_mode &lt;mode&gt;</code>	Configure the mode of the MULTIPURPOSE_IO pin. Valid modes are <code>OFF</code> , <code>INPUT_NMEA_UART</code> , <code>OUTPUT_FROM_INTERNAL_OSC</code> , <code>OUTPUT_FROM_SYNC_PULSE_IN</code> , <code>OUTPUT_FROM_PTP_1588</code> , or <code>OUTPUT_FROM_ENCODER_ANGLE</code> .
<code>udp_profile_lidar</code>	Configure the LIDAR data profile, valid modes are <code>LEGACY [Default]</code> , <code>RNG19_RFL8_SIG16_NIR16</code> , <code>RNG19_RFL8_SIG16_NIR16_DUAL</code> , <code>RNG15_RFL8_NIR8</code> .
<code>operating_mode &lt;NORMAL/STANDBY&gt;</code>	Set <code>NORMAL</code> to put the sensor into a normal operating mode or <code>STANDBY</code> to put the sensor into a low power (5W) operating mode where the motor does not spin and lasers do not fire. Note: <code>auto_start_flag &lt;1/0&gt;</code> is soon to be deprecated parameter name where <code>auto_start_flag 0</code> is equivalent to <code>operating_mode STANDBY</code> and <code>auto_start_flag 1</code> is equivalent to <code>operating_mode NORMAL</code> . However, during the deprecation phase, either <code>operating_mode</code> or <code>auto_start_flag</code> may be used. When either one is updated, the other parameter value will be updated to match upon setting the parameter value.

Table5: Reinitialize, Write Configuration, and Auto Destination UDP

Command	Command Description	Response
<code>reinitialize</code> or <code>reinit</code>	Restarts the sensor. Changes to lidar, multi-purpose_io, and timestamp modes will only take effect after reinitialization.	<code>reinitialize</code> or <code>reinit</code> on success
<code>save_config_params</code>	Makes all current parameter settings persist after reboot.	<code>save_config_params</code> on success
<code>set_udp_dest_auto</code>	Set the destination of UDP traffic to the destination address that issued the command.	<code>set_udp_dest_auto</code> on success

## 2 HTTP API Reference

---

This reference guide documents the interface for HTTP API and is accessible via `/api/v1` on the sensor hosted HTTP server.

The sensor can be queried and configured using an HTTP GET requests. This can be done using several different tools such as `httplib`, `curl`, `Advanced REST Client`, etc.

Here is an example using **curl** command:

```
$ curl --request GET --url http://169.254.198.184/api/v1/sensor/metadata/lidar_intrinsics

{
  "lidar_to_sensor_transform": [-1, 0, 0, 0, 0, -1, 0, 0, 0, 0, 0, 1, 36.18, 0, 0, 0, 1]
}
```

### 2.1 Sensor Metadata

---

#### GET `/api/v1/sensor/metadata/sensor_info`

GET `169.254.198.184/api/v1/sensor/metadata/sensor_info`  
Get the sensor information

```
GET /api/v1/sensor/metadata/sensor_info HTTP/1.1
Host: 169.254.198.184

HTTP/1.1 200 OK
content-length: 321
content-type: application/json

{
  "base_pn": "",
  "base_sn": "",
  "build_date": "2022-03-31T23:38:32Z",
  "build_rev": "v2.3.0-rc.2",
  "image_rev": "ousteros-image-prod-aries-v2.3.0-rc.2+20220401070201.staging",
  "initialization_id": 5431288,
  "prod_line": "OS-1-128",
  "prod_pn": "840-103575-06",
  "prod_sn": "992139000666",
  "proto_rev": "",
  "status": "RUNNING"
}
```

**statusCode 200** No error

**Description** Returns JSON-formatted response that includes serial number, product number, FW image revision and sensor status along with other parameters as shown is provided.

## GET /api/v1/sensor/metadata/lidar\_data\_format

GET 169.254.198.184/api/v1/sensor/metadata/lidar\_data\_format

Get the sensor lidar data format

```
GET /api/v1/sensor/metadata/lidar_data_format HTTP/1.1
Host: 169.254.198.184

HTTP/1.1 200 OK
content-type: application/json
content-length: 661

{
  "column_window": [256, 768],
  "pixel_shift_by_row": [24, 16, 8, 0, 24, 16,
    8, 0, 24, 16, 8, 0, 24, 16, 8, 0, 24, 16,
    8, 0, 24, 16, 8, 0, 24, 16, 8, 0, 24, 16,
    8, 0, 24, 16, 8, 0, 24, 16, 8, 0, 24, 16,
    8, 0, 24, 16, 8, 0, 24, 16, 8, 0, 24, 16,
    8, 0, 24, 16, 8, 0, 24, 16, 8, 0, 24, 16,
    8, 0, 24, 16, 8, 0, 24, 16, 8, 0, 24, 16,
    8, 0, 24, 16, 8, 0, 24, 16, 8, 0, 24, 16,
    8, 0, 24, 16, 8, 0, 24, 16, 8, 0, 24, 16,
    8, 0, 24, 16, 8, 0, 24, 16, 8, 0, 24, 16,
    8, 0],
  "columns_per_packet": 16,
  "udp_profile_lidar": "RNG19_RFL8_SIG16_NIR16_DUAL"
  "udp_profile_imu": "LEGACY",
  "pixels_per_column": 128,
  "columns_per_frame": 1024,
}
```

**statusCode 200** No error

**Description** Returns JSON-formatted response that describes the structure of a lidar packet.

**columns\_per\_frame**: Number of measurement columns per frame. This can be 512, 1024, or 2048, depending upon the set lidar mode.

**columns\_per\_packet**: Number of measurement blocks contained in a single lidar packet. Currently in v2.2.0 and earlier, this is 16. **Note**: This is not user configurable.

**pixel\_shift\_by\_row**: Offset in terms of pixel count. Can be used to destagger image. Varies by lidar mode. Length of this array is equal to the number of channels of the sensor.

**pixels\_per\_column**: Number of channels of the sensor.

**column\_window**: Index of measurement blocks that are active. Default is [0, lidar\_mode-1], e.g. [0,1023]. If there is an azimuth window set, this parameter will reflect which measurement blocks of data are within the region of interest.

**udp\_profile\_lidar**: Lidar data profile format. Default LEGACY.

**udp\_profile\_lidar**: Lidar data profile format. Default LEGACY.

**udp\_profile\_imu**: IMU data profile format. Default LEGACY.



**NOTE:** This command only works when the sensor is in **RUNNING** status.

## GET /api/v1/sensor/metadata/beam\_intrinsics

GET 169.254.198.184/api/v1/sensor/metadata/beam\_intrinsics

Get the sensor beam intrinsics

```
GET /api/v1/sensor/metadata/beam_intrinsics HTTP/1.1
Host: 169.254.198.184

HTTP/1.1 200 OK
content-type: application/json
content-length: 4506

{
  "beam_azimuth_angles": [4.2300000000000004, 1.4099999999999999, -1.3999999999999999, -4.21,
    4.2199999999999998, 1.4199999999999999, -1.4099999999999999, -4.2199999999999998, 4.2300000000000004,
    1.4099999999999999, -1.4199999999999999, -4.21, 4.2300000000000004, 1.4199999999999999,
    -1.3999999999999999, -4.2000000000000002, 4.2300000000000004, 1.4099999999999999, -1.3899999999999999,
    -4.21, 4.25, 1.4299999999999999, -1.4099999999999999, -4.2199999999999998, 4.2400000000000002,
    1.4399999999999999, -1.4099999999999999, -4.2199999999999998, 4.2300000000000004, 1.4199999999999999,
    -1.3799999999999999, -4.2199999999999998, 4.2400000000000002, 1.4199999999999999, -1.3999999999999999,
    -4.2300000000000004, 4.2599999999999998, 1.4399999999999999, -1.4099999999999999, -4.2300000000000004,
    4.2400000000000002, 1.4399999999999999, -1.4099999999999999, -4.2300000000000004, 4.2400000000000002,
    1.4199999999999999, -1.4099999999999999, -4.2400000000000002, 4.25, 1.4199999999999999,
    -1.3899999999999999, -4.2199999999999998, 4.25, 1.4099999999999999, -1.3999999999999999,
    -4.2300000000000004, 4.2400000000000002, 1.4299999999999999, -1.4099999999999999, -4.2300000000000004,
    4.2400000000000002, 1.4199999999999999, -1.4099999999999999, -4.2300000000000004, 4.25,
    1.4199999999999999, -1.3999999999999999, -4.2400000000000002, 4.2400000000000002, 1.4399999999999999,
    -1.3999999999999999, -4.2400000000000002, 1.4299999999999999, -1.3999999999999999,
    -4.2400000000000002, 4.25, 1.4299999999999999, -1.4099999999999999, -4.2400000000000002, 4.25,
    1.4199999999999999, -1.4199999999999999, -4.2199999999999998, 4.2400000000000002, 1.4299999999999999,
    -1.3999999999999999, -4.2400000000000002, 4.25, 1.4399999999999999, -1.4099999999999999,
    -4.2400000000000002, 4.25, 1.4199999999999999, -1.4099999999999999, -4.2400000000000002, 4.25,
    1.4199999999999999, -1.4099999999999999, -4.25, 4.2599999999999998, 1.4299999999999999,
    -1.4099999999999999, -4.2599999999999998, 4.2699999999999996, 1.4299999999999999, -1.3999999999999999,
    -4.2400000000000002, 4.25, 1.4299999999999999, -1.3999999999999999, -4.2400000000000002,
    4.2599999999999998, 1.4199999999999999, -1.3999999999999999, -4.25, 4.2599999999999998,
    1.4299999999999999, -1.4099999999999999, -4.2599999999999998, 4.2599999999999998, 1.4199999999999999,
    -1.4199999999999999, -4.2599999999999998, 4.25, 1.4199999999999999, -1.4199999999999999,
    -4.2699999999999996],
  "beam_altitude_angles": [21.0100000000000002, 20.7199999999999999,
    20.4200000000000002, 20.1000000000000001, 19.7899999999999999, 19.48, 19.1700000000000002, 18.84,
    18.5500000000000001, 18.2199999999999999, 17.8999999999999999, 17.6000000000000001, 17.27,
    16.9600000000000001, 16.6499999999999999, 16.32, 15.9700000000000001, 15.65, 15.34, 15.01, 14.67, 14.35,
    14.01, 13.68, 13.33, 13.02, 12.67, 12.34, 11.99, 11.65, 11.33, 10.98, 10.6400000000000001,
    10.2799999999999999, 9.9499999999999993, 9.6099999999999994, 9.2699999999999996, 8.9199999999999999,
    8.5700000000000003, 8.2300000000000004, 7.8799999999999999, 7.54, 7.1799999999999997,
    6.8399999999999999, 6.4699999999999998, 6.1299999999999999, 5.7800000000000002, 5.4500000000000002,
    5.0899999999999999, 4.7300000000000004, 4.4100000000000001, 4.0499999999999998, 3.6899999999999999,
    3.3199999999999998, 2.98, 2.6299999999999999, 2.27, 1.9299999999999999, 1.5700000000000001, 1.22,
    0.8499999999999998, 0.5, 0.1499999999999999, -0.19, -0.5500000000000004, -0.9200000000000004,
    -1.25, -1.6299999999999999, -1.98, -2.3100000000000001, -2.6699999999999999, -3.04,
```

(continues on next page)

(continued from previous page)

```
-3.3999999999999999, -3.7400000000000002, -4.0899999999999999, -4.4500000000000002,  
-4.7999999999999998, -5.1500000000000004, -5.5, -5.8700000000000001, -6.21, -6.5700000000000003,  
-6.9100000000000001, -7.25, -7.6200000000000001, -7.9500000000000002, -8.3000000000000007,  
-8.6500000000000004, -9.0099999999999998, -9.3499999999999996, -9.6899999999999995,  
-10.0500000000000001, -10.3900000000000001, -10.74, -11.09, -11.42, -11.77, -12.109999999999999,  
-12.449999999999999, -12.8000000000000001, -13.1400000000000001, -13.4700000000000001,  
-13.81, -14.15, -14.48, -14.82, -15.1300000000000001, -15.4700000000000001, -15.81,  
-16.149999999999999, -16.48, -16.8000000000000001, -17.149999999999999, -17.48, -17.789999999999999,  
-18.1200000000000001, -18.469999999999999, -18.77, -19.09, -19.4200000000000002, -19.73,  
-20.059999999999999, -20.359999999999999, -20.6900000000000001, -21, -21.32, -21.6200000000000001,  
-21.9400000000000001],  
"lidar_origin_to_beam_origin_mm": 15.805999999999999  
}
```

**status code 200** No error

**Description** Returns JSON-formatted beam altitude and azimuth offsets, in degrees. Length of arrays is equal to the number of channels in the sensor. Also returns distance between lidar origin and beam origin in mm, to be used for point cloud calculations.

### GET /api/v1/sensor/metadata/imu\_intrinsics

GET 169.254.198.184/api/v1/sensor/metadata/imu\_intrinsics

Get the sensor imu intrinsics

```
GET /api/v1/sensor/metadata/imu_intrinsics HTTP/1.1  
Host: 169.254.198.184  
  
HTTP/1.1 200 OK  
content-type: application/json  
content-length: 117  
{  
  "imu_to_sensor_transform": [1, 0, 0, 6.2530000000000001,  
    0, 1, 0, -11.775, 0, 0, 1, 7.6449999999999996, 0, 0, 0, 1]  
}
```

**status code 200** No error

**Description** Returns JSON-formatted IMU transformation matrix needed to transform to the Sensor Coordinate Frame.

## GET /api/v1/sensor/metadata/lidar\_intrinsics

GET 169.254.198.184/api/v1/sensor/metadata/lidar\_intrinsics

Get the sensor lidar intrinsics

```
GET /api/v1/sensor/metadata/lidar_intrinsics HTTP/1.1
Host: 169.254.198.184

HTTP/1.1 200 OK
content-type: application/json
content-length: 85

{
  "lidar_to_sensor_transform": [-1, 0, 0, 0, 0, -1, 0, 0, 0, 0, 1, 36.18, 0, 0, 0, 1]
}
```

**status code 200** No error

**Description** Returns JSON-formatted lidar transformation matrix needed to transform to the Sensor Coordinate Frame.

## GET /api/v1/sensor/metadata/calibration\_status

GET 169.254.198.184/api/v1/sensor/metadata/calibration\_status

Get the sensor calibration status

```
GET /api/v1/sensor/metadata/calibration_status HTTP/1.1
Host: 169.254.198.184

HTTP/1.1 200 OK
content-type: application/json
content-length: 69

{
  "reflectivity":
    {
      "timestamp": "2021-10-05T00:02:36",
      "valid": true
    }
}
```

**status code 200** No error

**Description** Returns JSON formatted calibration status of the sensor reflectivity. **valid**: true/false depending on calibration status. **timestamp**: if valid is true; time at which the calibration was completed.

## GET /api/v1/sensor/metadata

GET 169.254.198.184/api/v1/sensor/metadata

Get the sensor metadata information

```
GET /api/v1/sensor/metadata HTTP/1.1
Host: 169.254.198.184

HTTP/1.1 200 OK
content-type: application/json
content-length: 6675
{
  "config_params":
  {
    "signal_multiplier": 1,
    "udp_dest": "169.254.175.254",
    "multipurpose_io_mode": "OFF",
    "udp_port_lidar": 7502,
    "nmea_leap_seconds": 0,
    "nmea_in_polarity": "ACTIVE_HIGH",
    "sync_pulse_out_pulse_width": 10,
    "timestamp_mode": "TIME_FROM_INTERNAL_OSC",
    "lidar_mode": "1024x10",
    "udp_profile_lidar": "RNG19_RFL8_SIG16_NIR16_DUAL",
    "nmea_ignore_valid_char": 0,
    "udp_profile_imu": "LEGACY",
    "sync_pulse_out_frequency": 1,
    "operating_mode": "NORMAL",
    "udp_ip": "169.254.175.254",
    "columns_per_packet": 16,
    "nmea_baud_rate": "BAUD_9600",
    "phase_lock_enable": false,
    "azimuth_window": [90000, 270000],
    "udp_port_imu": 7503,
    "sync_pulse_out_angle": 360,
    "auto_start_flag": 1,
    "sync_pulse_out_polarity": "ACTIVE_HIGH",
    "phase_lock_offset": 0,
    "sync_pulse_in_polarity": "ACTIVE_HIGH"
  },
  "sensor_info":
  {
    "image_rev": "ousteros-image-prod-aries-v2.3.0-rc.1+20220319004702.staging",
    "build_rev": "v2.3.0-rc.1",
    "prod_sn": "992139000666",
    "initialization_id": 5431287,
    "base_sn": "",
    "build_date": "2022-03-18T20:00:29Z",
    "prod_pn": "840-103575-06",
    "prod_line": "OS-1-128",
    "proto_rev": "",
    "status": "RUNNING",
    "base_pn": ""
  },
  "beam_intrinsics":
```

(continues on next page)

```
{  
  "beam_azimuth_angles": [4.2300000000000004, 1.4099999999999999, -1.3999999999999999,  
    -4.21, 4.2199999999999998, 1.4199999999999999, -1.4099999999999999, -4.2199999999999998,  
    4.2300000000000004, 1.4099999999999999, -1.4199999999999999, -4.21, 4.2300000000000004,  
    1.4199999999999999, -1.3999999999999999, -4.2000000000000002, 4.2300000000000004,  
    1.4099999999999999, -1.3899999999999999, -4.21, 4.25, 1.4299999999999999,  
    -1.4099999999999999, -4.2199999999999998, 4.2400000000000002, 1.4399999999999999,  
    -1.4099999999999999, -4.2199999999999998, 4.2300000000000004, 1.4199999999999999,  
    -1.3799999999999999, -4.2199999999999998, 4.2400000000000002, 1.4199999999999999,  
    -1.3999999999999999, -4.2300000000000004, 4.2599999999999998, 1.4399999999999999,  
    -1.4099999999999999, -4.2300000000000004, 4.2400000000000002, 1.4399999999999999,  
    -1.4099999999999999, -4.2300000000000004, 4.2400000000000002, 1.4199999999999999,  
    -1.4099999999999999, -4.2400000000000002, 4.25, 1.4199999999999999, -1.3899999999999999,  
    -4.2199999999999998, 4.25, 1.4099999999999999, -1.3999999999999999, -4.2300000000000004,  
    4.2400000000000002, 1.4299999999999999, -1.4099999999999999, -4.2300000000000004,  
    4.2400000000000002, 1.4199999999999999, -1.4099999999999999, -4.2300000000000004, 4.25,  
    1.4199999999999999, -1.3999999999999999, -4.2400000000000002, 4.2400000000000002,  
    1.4399999999999999, -1.3999999999999999, -4.2400000000000002, 4.2400000000000002,  
    1.4299999999999999, -1.3999999999999999, -4.2400000000000002, 4.25, 1.4299999999999999,  
    -1.4099999999999999, -4.2400000000000002, 4.25, 1.4199999999999999, -1.4199999999999999,  
    -4.2199999999999998, 4.2400000000000002, 1.4299999999999999, -1.3999999999999999,  
    -4.2400000000000002, 4.25, 1.4399999999999999, -1.4099999999999999, -4.2400000000000002,  
    4.25, 1.4199999999999999, -1.4099999999999999, -4.2400000000000002, 4.25,  
    1.4199999999999999, -1.4099999999999999, -4.25, 4.2599999999999998, 1.4299999999999999,  
    -1.4099999999999999, -4.2599999999999998, 4.2699999999999996, 1.4299999999999999,  
    -1.3999999999999999, -4.2400000000000002, 4.25, 1.4299999999999999, -1.3999999999999999,  
    -4.2400000000000002, 4.2599999999999998, 1.4199999999999999, -1.3999999999999999, -4.25,  
    4.2599999999999998, 1.4299999999999999, -1.4099999999999999, -4.2599999999999998,  
    4.2599999999999998, 1.4199999999999999, -1.4199999999999999, -4.2599999999999998, 4.25,  
    1.4199999999999999, -1.4199999999999999, -4.2699999999999996],  
  "beam_altitude_angles": [21.0100000000000002, 20.7199999999999999, 20.4200000000000002,  
    20.1000000000000001, 19.7899999999999999, 19.48, 19.1700000000000002, 18.84,  
    18.5500000000000001, 18.2199999999999999, 17.8999999999999999, 17.6000000000000001,  
    17.27, 16.9600000000000001, 16.6499999999999999, 16.32, 15.9700000000000001, 15.65, 15.34,  
    15.01, 14.67, 14.35, 14.01, 13.68, 13.33, 13.02, 12.67, 12.34, 11.99, 11.65, 11.33,  
    10.98, 10.6400000000000001, 10.2799999999999999, 9.9499999999999999, 9.6099999999999999,  
    9.2699999999999999, 8.9199999999999999, 8.5700000000000003, 8.2300000000000004,  
    7.8799999999999999, 7.54, 7.1799999999999997, 6.8399999999999999, 6.4699999999999998,  
    6.1299999999999999, 5.7800000000000002, 5.4500000000000002, 5.0899999999999999,  
    4.7300000000000004, 4.4100000000000001, 4.0499999999999998, 3.6899999999999999,  
    3.3199999999999998, 2.98, 2.6299999999999999, 2.27, 1.9299999999999999, 1.5700000000000001,  
    1.22, 0.8499999999999998, 0.5, 0.1499999999999999, -0.19, -0.5500000000000004,  
    -0.9200000000000004, -1.25, -1.6299999999999999, -1.98, -2.3100000000000001,  
    -2.6699999999999999, -3.04, -3.3999999999999999, -3.7400000000000002, -4.0899999999999999,  
    -4.4500000000000002, -4.7999999999999998, -5.1500000000000004, -5.5, -5.8700000000000001,  
    -6.21, -6.5700000000000003, -6.9100000000000001, -7.25, -7.6200000000000001,  
    -7.9500000000000002, -8.3000000000000007, -8.6500000000000004, -9.0099999999999998,  
    -9.3499999999999996, -9.6899999999999995, -10.0500000000000001, -10.3900000000000001, -10.74,  
    -11.09, -11.42, -11.77, -12.1099999999999999, -12.4499999999999999, -12.8000000000000001,  
    -13.1400000000000001, -13.4700000000000001, -13.81, -14.15, -14.48, -14.82, -15.1300000000000001,  
    -15.4700000000000001, -15.81, -16.1499999999999999, -16.48, -16.8000000000000001,  
    -17.1499999999999999, -17.48, -17.7899999999999999, -18.1200000000000001, -18.4699999999999999,  
    -18.77, -19.09, -19.4200000000000002, -19.73, -20.0599999999999999, -20.3599999999999999,  
    -20.6900000000000001, -21, -21.32, -21.6200000000000001, -21.9400000000000001],
```



```
HTTP/1.1 200 OK
Host: 192.0.2.123
content-type: application/json; charset=UTF-8

{
  "fw": "ousteros-image-prod-aries-v2.0.0"
}
```

>**json string fw** Running firmware image name and version.

**statusCode 200** No error

## GET /api/v1/system/network

GET 192.0.2.123/api/v1/system/network  
Get the system network configuration.

```
GET /api/v1/system/network HTTP/1.1
Host: 192.0.2.123
```

```
HTTP/1.1 200 OK
content-type: application/json; charset=UTF-8

{
  "carrier": true,
  "duplex": "full",
  "ethaddr": "bc:0f:a7:00:01:2c",
  "hostname": "os-991900123456",
  "ipv4": {
    "addr": "192.0.2.123/24",
    "link_local": "169.254.245.183/16",
    "override": null
  },
  "ipv6": {
    "link_local": "fe80::be0f:a7ff:fe00:12c/64"
  },
  "speed": 1000
}
```

>**json boolean carrier** State of Ethernet link, **true** when physical layer is connected.

>**json string duplex** Duplex mode of Ethernet link, **half** or **full**.

>**json string ethaddr** Ethernet hardware (MAC) address.

>**json string hostname** Hostname of the sensor, also used when requesting *DHCP* address and registering mDNS hostname.

>**json object ipv4** See *ipv4 object*

>**json string ipv6.link\_local** Link-local IPv6 address.

**>json integer speed** Ethernet physical layer speed in Mbps, should be 1000 Mbps.

**statuscode 200** No error

## GET /api/v1/system/network/ipv4

GET 192.0.2.123/api/v1/system/network/ipv4  
Get the IPv4 network configuration.

```
GET /api/v1/system/network/ipv4 HTTP/1.1  
Host: 192.0.2.123
```

```
HTTP/1.1 200 OK  
content-type: application/json; charset=UTF-8  
  
{  
  "addr": "192.0.2.123/23",  
  "link_local": "169.254.245.183/16",  
  "override": null  
}
```

**>json string addr** Current global or private IPv4 address.

**>json string link\_local** Link-local IPv4 address.

**>json string override** Static IP override value, this should match **addr**. This value will be **null** when unset and operating in *DHCP* or *link-local* modes.

**statuscode 200** No error

## GET /api/v1/system/network/ipv4/override

GET 192.0.2.123/api/v1/system/network/ipv4/override  
Get the current IPv4 static IP address override.

```
GET /api/v1/system/network/ipv4/override HTTP/1.1  
Host: 192.0.2.123
```

```
HTTP/1.1 200 OK  
content-type: application/json; charset=UTF-8  
  
null
```

**>json string** Static IP override value, this should match **addr**. This value will be **null** when unset and operating in *DHCP* mode.

**statuscode 200** No error



## PUT /api/v1/system/network/ipv4/override

PUT 192.0.2.123/api/v1/system/network/ipv4/override

Override the default dynamic behavior and set a static IP address.

---

**Note:** The sensor will reset the network configuration after a short sub second delay (to allow for the HTTP response to be sent). After this delay the sensor will only be reachable on the newly set IPv4 address.

The sensor needs to be reachable either by *link-local* or dynamic *DHCP* configuration or by an existing static IP override from the host reconfiguring the sensor.

---

**Warning:** If an unreachable network address is set, the sensor will become unreachable. Tools such as avahi-browse, dns-sd, or mDNS browser can help with finding a sensor on a network.

Static IP override should only be used in special use cases. The *link-local* configuration is recommended where possible.

```
PUT /api/v1/system/network/ipv4/override HTTP/1.1
```

```
Content-Type: application/json
```

```
Host: 192.0.2.123
```

```
"192.0.2.100/24"
```

<json string Static IP override value with subnet mask

>json string Static IP override value that system will set after a short delay.

statuscode 200 No error

## DELETE /api/v1/system/network/ipv4/override

DELETE 192.0.2.123/api/v1/system/network/ipv4/override

Delete the static IP override value and return to dynamic configuration.

---

**Note:** The sensor will reset the network configuration after a short sub second delay (to allow for the HTTP response to be sent). After this delay the sensor will only be reachable on the newly set IPv4 address.

The sensor may be unreachable for several seconds while a *link-local* lease is obtained from the network or client machine.

---

```
DELETE /api/v1/system/network/ipv4/override HTTP/1.1
```

```
Host: 192.0.2.123
```

**statuscode 204** No error, no content

## 2.3 Time

---

### GET /api/v1/time

GET 192.0.2.123/api/v1/time

Get the system time configuration for all timing components of the sensor.

```
GET /api/v1/time HTTP/1.1
Host: 192.0.2.123
```

```
HTTP/1.1 200 OK
content-type: application/json; charset=UTF-8

{
  "ptp": {
    "current_data_set": {
      "mean_path_delay": 37950,
      "offset_from_master": -211488,
      "steps_removed": 1
    },
    "parent_data_set": {
      "gm_clock_accuracy": 33,
      "gm_clock_class": 6,
      "gm_offset_scaled_log_variance": 20061,
      "grandmaster_identity": "001747.ffffe.700038",
      "grandmaster_priority1": 128,
      "grandmaster_priority2": 128,
      "observed_parent_clock_phase_change_rate": 2147483647,
      "observed_parent_offset_scaled_log_variance": 65535,
      "parent_port_identity": "001747.ffffe.700038-1",
      "parent_stats": 0
    },
    "port_data_set": {
      "announce_receipt_timeout": 3,
      "delay_mechanism": 1,
      "log_announce_interval": 1,
      "log_min_delay_req_interval": 0,
      "log_min_pdelay_req_interval": 0,
      "log_sync_interval": 0,
      "peer_mean_path_delay": 0,
      "port_identity": "bc0fa7.ffffe.00012c-1",
      "port_state": "SLAVE",
      "version_number": 2
    },
    "time_properties_data_set": {
      "current_utc_offset": 37,
      "current_utc_offset_valid": 1,
      "frequency_traceable": 1,

```

(continues on next page)

```
"leap59": 0,
"leap61": 0,
"ptp_timescale": 1,
"time_source": 32,
"time_traceable": 1
},
"time_status_np": {
  "cumulative_scaled_rate_offset": 0,
  "gm_identity": "001747.ffff.700038",
  "gm_present": true,
  "gm_time_base_indicator": 0,
  "ingress_time": 1552413985821448000,
  "last_gm_phase_change": "0x0000'0000000000000000.0000",
  "master_offset": -211488,
  "scaled_last_gm_phase_change": 0
}
},
"sensor": {
  "nmea": {
    "baud_rate": "BAUD_9600",
    "diagnostics": {
      "decoding": {
        "date_decoded_count": 0,
        "last_read_message": "",
        "not_valid_count": 0,
        "utc_decoded_count": 0
      },
      "io_checks": {
        "bit_count": 1,
        "bit_count_unfiltered": 0,
        "char_count": 0,
        "start_char_count": 0
      }
    },
    "ignore_valid_char": 0,
    "leap_seconds": 0,
    "locked": 0,
    "polarity": "ACTIVE_HIGH"
  },
  "sync_pulse_in": {
    "diagnostics": {
      "count": 1,
      "count_unfiltered": 0,
      "last_period_nsec": 0
    },
    "locked": 0,
    "polarity": "ACTIVE_HIGH"
  },
  "sync_pulse_out": {
    "angle_deg": 360,
    "frequency_hz": 1,
    "mode": "OFF",
    "polarity": "ACTIVE_HIGH",
    "pulse_width_ms": 10
  }
}
```

(continued from previous page)

```
},
  "timestamp": {
    "mode": "TIME_FROM_INTERNAL_OSC",
    "time": 57178.44114677,
    "time_options": {
      "internal_osc": 57178,
      "ptp_1588": 1552413986,
      "sync_pulse_in": 1
    }
  }
},
"system": {
  "monotonic": 57191.819600378,
  "realtime": 1552413949.3948405,
  "tracking": {
    "frequency": -7.036,
    "last_offset": 5.942e-06,
    "leap_status": "normal",
    "ref_time_utc": 1552413947.8259742,
    "reference_id": "70747000",
    "remote_host": "ptp",
    "residual_frequency": 0.006,
    "rms_offset": 5.358e-06,
    "root_delay": 1e-09,
    "root_dispersion": 0.000129677,
    "skew": 1.144,
    "stratum": 1,
    "system_time_offset": -2.291e-06,
    "update_interval": 2
  }
}
}
```

**>json string** See sub objects for details.

**statuscode 200** No error

### GET /api/v1/time/sensor

GET 169.254.198.184/api/v1/time/sensor

Get the sensor time information

```
GET /api/v1/time/sensor HTTP/1.1
Host: 169.254.198.184

HTTP/1.1 200 OK
content-type: application/json
content-length: 773
```

(continues on next page)

```

{
  "multipurpose_io": {
    "mode": "OFF",
    "nmea": {
      "baud_rate": "BAUD_9600",
      "diagnostics": {
        "decoding": {
          "date_decoded_count": 0,
          "last_read_message": "",
          "not_valid_count": 0,
          "utc_decoded_count": 0
        },
        "io_checks": {
          "bit_count": 1,
          "bit_count_unfiltered": 0,
          "char_count": 0,
          "start_char_count": 0
        }
      },
      "ignore_valid_char": 0,
      "leap_seconds": 0,
      "locked": 0,
      "polarity": "ACTIVE_HIGH"
    },
    "sync_pulse_out": {
      "angle_deg": 360,
      "frequency_hz": 1,
      "polarity": "ACTIVE_HIGH",
      "pulse_width_ms": 10
    }
  },
  "sync_pulse_in": {
    "diagnostics": {
      "count": 1,
      "count_unfiltered": 0,
      "last_period_nsec": 0
    },
    "locked": 0,
    "polarity": "ACTIVE_HIGH"
  },
  "timestamp": {
    "mode": "TIME_FROM_INTERNAL_OSC",
    "time": 27784.88125111,
    "time_options": {
      "internal_osc": 27784,
      "ptp_1588": 27795,
      "sync_pulse_in": 1
    }
  }
}

```

**status code 200** No error

**Description** Returns JSON-formatted sensor timing configuration and status of udp `timestamp`, `sync_pulse_in`, and `multipurpose_io`. For more information on these parameters refer to the `get_time_info` TCP command.

## GET /api/v1/time/system

GET 192.0.2.123/api/v1/time/system

Get the operating system time status. These values relate to the sensor operating system clocks, and not clocks related to hardware timestamp data from the lidar sensor.

```
GET /api/v1/time/system HTTP/1.1
Host: 192.0.2.123
```

```
HTTP/1.1 200 OK
content-type: application/json; charset=UTF-8

{
  "monotonic": 345083.599570944,
  "realtime": 1551814510.730453,
  "tracking": {
    "frequency": -6.185,
    "last_offset": -3.315e-06,
    "leap_status": "normal",
    "ref_time_utc": 1551814508.1982567,
    "reference_id": "70747000",
    "remote_host": "ptp",
    "residual_frequency": -0.019,
    "rms_offset": 4.133e-06,
    "root_delay": 1e-09,
    "root_dispersion": 0.000128737,
    "skew": 1.14,
    "stratum": 1,
    "system_time_offset": 4.976e-06,
    "update_interval": 2
  }
}
```

**>json float monotonic** Monotonic time of operating system. This timestamp never counts backwards and is the time since boot in seconds.

**>json float realtime** Time in seconds since the Unix epoch, should match wall time if synchronized with external time source.

**>json object tracking** Operating system time synchronization tracking status. See [chronyc tracking documentation](#) for more information.

**statuscode 200** No error

System `tracking` fields of interest:

**rms\_offset** Long-term average of the offset value.

**system\_time\_offset** Time delta (in seconds) between the estimate of the operating system time and the current true time.

**last\_offset** Estimated local offset on the last clock update.

**ref\_time\_utc** UTC Time at which the last measurement from the reference source was processed.

**remote\_host** This is either `ptp` if the system is synchronizing to a *PTP* time source or the address of a remote NTP server the system has selected if the sensor is connected to the Internet.

## GET /api/v1/time/ptp

GET 192.0.2.123/api/v1/time/ptp

Get the status of the *PTP* time synchronization daemon.

---

**Note:** See the [IEEE 1588-2008 standard for more details](#) on the standard management messages.

---

```
GET /api/v1/time/ptp HTTP/1.1
Host: 192.0.2.123
```

```
HTTP/1.1 200 OK
content-type: application/json; charset=UTF-8

{
  "current_data_set": {
    "mean_path_delay": 30110,
    "offset_from_master": 224159,
    "steps_removed": 1
  },
  "parent_data_set": {
    "gm_clock_accuracy": 33,
    "gm_clock_class": 6,
    "gm_offset_scaled_log_variance": 20061,
    "grandmaster_identity": "001747.ffff.700038",
    "grandmaster_priority1": 128,
    "grandmaster_priority2": 128,
    "observed_parent_clock_phase_change_rate": 2147483647,
    "observed_parent_offset_scaled_log_variance": 65535,
    "parent_port_identity": "001747.ffff.700038-1",
    "parent_stats": 0
  },
  "port_data_set": {
    "announce_receipt_timeout": 3,
    "delay_mechanism": 1,
    "log_announce_interval": 1,
    "log_min_delay_req_interval": 0,
    "log_min_pdelay_req_interval": 0,
    "log_sync_interval": 0,
    "peer_mean_path_delay": 0,
    "port_identity": "bc0fa7.ffff.00012c-1",
    "port_state": "SLAVE",
    "version_number": 2
  },
  "time_properties_data_set": {
    "current_utc_offset": 37,
    "current_utc_offset_valid": 1,

```

(continues on next page)

```

    "frequency_traceable": 1,
    "leap59": 0,
    "leap61": 0,
    "ptp_timescale": 1,
    "time_source": 32,
    "time_traceable": 1
  },
  "time_status_np": {
    "cumulative_scaled_rate_offset": 0,
    "gm_identity": "001747.ffff.700038",
    "gm_present": true,
    "gm_time_base_indicator": 0,
    "ingress_time": 1551814546772493800,
    "last_gm_phase_change": "0x0000'0000000000000000.0000",
    "master_offset": 224159,
    "scaled_last_gm_phase_change": 0
  }
}

```

>**json object current\_data\_set** Result of the PMC **GET CURRENT\_DATA\_SET** command.

>**json object parent\_data\_set** Result of the PMC **GET PARENT\_DATA\_SET** command.

>**json object port\_data\_set** Result of the PMC **GET PORT\_DATA\_SET** command.

>**json object time\_properties\_data\_set** Result of the PMC **GET TIME\_PROPERTIES\_DATA\_SET** command.

>**json object time\_status\_np** Result of the PMC **GET TIME\_STATUS\_NP** command. This is a linuxptp non-portable command.

**statuscode 200** No error

Fields of interest:

**current\_data\_set.offset\_from\_master** Offset from master time source in nanoseconds as calculated during the last update from master.

**parent\_data\_set.grandmaster\_identity** This should match the local grandmaster clock. If this displays the sensor's clock identity (derived from Ethernet hardware address) then this indicates the sensor is not properly synchronized to a grandmaster.

**parent\_data\_set** Various information about the selected master clock.

**port\_data\_set.port\_state** This value will be **SLAVE** when a remote master clock is selected. See **parent\_data\_set** for selected master clock.

**port\_data\_set** Local sensor *PTP* configuration values. Grandmaster clock needs to match these for proper time synchronization.

**time\_properties\_data\_set** *PTP* properties as given by master clock.

**time\_status\_np.gm\_identity** Selected grandmaster clock identity.

**time\_status\_np.gm\_present** True when grandmaster has been detected. This may stay true even if grandmaster goes off-line. Use **port\_data\_set.port\_state** to determine up-to-date synchronization status. When this is false then the local clock is selected.



**time\_status\_np.ingress\_time** Indicates when the last *PTP* message was received. Units are in nanoseconds.

**time\_status\_np** Linux *PTP* specific diagnostic values. The [Red Hat manual](#) provides some more information on these fields

## GET /api/v1/time/ptp/profile

GET 192.0.2.123/api/v1/time/ptp/profile

Get the active PTP profile of the Ouster sensor

```
GET /api/v1/time/ptp/profile HTTP/1.1
Content-Type: application/json
Host: 192.0.2.123
```

```
HTTP/1.1 200 OK
content-length: 9
content-type: application/json; charset=UTF-8

"gptp"
```

>**json string** Active PTP profile.

**statuscode 200** No error

## PUT /api/v1/time/ptp/profile

PUT 192.0.2.123/api/v1/time/ptp/profile

Change the PTP profile of the Ouster sensor

```
PUT /api/v1/time/ptp/profile HTTP/1.1
Content-Type: application/json
Host: 192.0.2.123

"gptp"
```

```
HTTP/1.1 200 OK
content-length: 9
content-type: application/json; charset=UTF-8

"gptp"
```

<**json string** PTP profile to be activated, valid options are "default", "gptp", and "automotive-slave"

>**json string** Active PTP profile.

**statuscode 200** No error

## 2.4 Alerts, Diagnostics and Telemetry

---

### GET /api/v1/sensor/alerts

GET 169.254.198.184/api/v1/sensor/alerts

Get the sensor lidar intrinsics

```
GET /api/v1/sensor/alerts HTTP/1.1
Host: 169.254.198.184

HTTP/1.1 200 OK
content-length: 3941
content-type: application/json

{
  "active": [
    {
      "active": true,
      "category": "UDP_TRANSMISSION",
      "cursor": 8,
      "id": "0x01000018",
      "level": "WARNING",
      "msg": "Client machine announced it is not reachable on the provided not reachable on
            IMU data port; check that udp_dest and udp_port_imu configured on the sensor
            matches client IP and port.",
      "msg_verbose": "Failed to send imu UDP data to destination host 169.254.28.205:7503",
      "realtime": "1309574110356"
    }
  ],
  "log": [
    {
      "active": true,
      "category": "UDP_TRANSMISSION",
      "cursor": 0,
      "id": "0x01000018",
      "level": "WARNING",
      "msg": "Client machine announced it is not reachable on the provided not reachable on
            IMU data port; check that udp_dest and udp_port_imu configured on the sensor
            matches client IP and port.",
      "msg_verbose": "Failed to send imu UDP data to destination host 169.254.28.205:7503",
      "realtime": "87914851559"
    },
    {
      "active": true,
      "category": "UDP_TRANSMISSION",
      "cursor": 1,
      "id": "0x01000015",
      "level": "WARNING",
      "msg": "Client machine announced it is not reachable on the provided lidar data port;
            check that udp_dest and udp_port_lidar configured on the sensor matches client
            IP and port.",
      "msg_verbose": "Failed to send lidar UDP data to destination host 169.254.28.205:7502",
      "realtime": "88906828916"
    }
  ]
}
```

(continues on next page)

```
},
{
  "active": false,
  "category": "UDP_TRANSMISSION",
  "cursor": 2,
  "id": "0x01000015",
  "level": "WARNING",
  "msg": "Client machine announced it is not reachable on the provided lidar data port;
        check that udp_dest and udp_port_lidar configured on the sensor matches client
        IP and port.",
  "msg_verbose": "Cleared by reinitialization.",
  "realtime": "171640501848"
},
{
  "active": false,
  "category": "UDP_TRANSMISSION",
  "cursor": 3,
  "id": "0x01000018",
  "level": "WARNING",
  "msg": "Client machine announced it is not reachable on the provided not reachable on
        IMU data port; check that udp_dest and udp_port_imu configured on the sensor matches
        client IP and port.",
  "msg_verbose": "Cleared by reinitialization.",
  "realtime": "171640962692"
},
{
  "active": true,
  "category": "UDP_TRANSMISSION",
  "cursor": 4,
  "id": "0x01000018",
  "level": "WARNING",
  "msg": "Client machine announced it is not reachable on the provided not reachable on
        IMU data port; check that udp_dest and udp_port_imu configured on the sensor
        matches client IP and port.",
  "msg_verbose": "Failed to send imu UDP data to destination host 169.254.28.205:7503",
  "realtime": "188178225997"
},
{
  "active": true,
  "category": "UDP_TRANSMISSION",
  "cursor": 5,
  "id": "0x01000015",
  "level": "WARNING",
  "msg": "Client machine announced it is not reachable on the provided lidar data port;
        check that udp_dest and udp_port_lidar configured on the sensor matches client
        IP and port.",
  "msg_verbose": "Failed to send lidar UDP data to destination host 169.254.28.205:7502",
  "realtime": "189169539737"
},
{
  "active": false,
  "category": "UDP_TRANSMISSION",
  "cursor": 6,
  "id": "0x01000015",
```

(continued from previous page)

```
"level": "WARNING",
"msg": "Client machine announced it is not reachable on the provided lidar data port;
      check that udp_dest and udp_port_lidar configured on the sensor matches client
      IP and port.",
"msg_verbose": "Cleared by reinitialization.",
"realtime": "1293004145514"
},
{
  "active": false,
  "category": "UDP_TRANSMISSION",
  "cursor": 7,
  "id": "0x01000018",
  "level": "WARNING",
  "msg": "Client machine announced it is not reachable on the provided not reachable on
        IMU data port; check that udp_dest and udp_port_imu configured on the sensor
        matches client IP and port.",
  "msg_verbose": "Cleared by reinitialization.",
  "realtime": "1293004551057"
},
{
  "active": true,
  "category": "UDP_TRANSMISSION",
  "cursor": 8,
  "id": "0x01000018",
  "level": "WARNING",
  "msg": "Client machine announced it is not reachable on the provided not reachable on
        IMU data port; check that udp_dest and udp_port_imu configured on the sensor
        matches client IP and port.",
  "msg_verbose": "Failed to send imu UDP data to destination host 169.254.28.205:7503",
  "realtime": "1309574110356"
}
],
"next_cursor": 9
}
```

**status code 200** No error

**Description** Returns JSON-formatted sensor diagnostic information. - The **log** list contains alerts when they were activated or deactivated. An optional **START\_CURSOR** argument specifies where the log should start. - The **active** list contains all currently active alerts.

## GET /api/v1/diagnostics/dump

GET 192.0.2.123/api/v1/diagnostics/dump

Get the diagnostics files of the sensor

```
GET /api/v1/diagnostics/dump HTTP/1.1
```

```
Host: 192.0.2.123
```

```
HTTP/1.1 200 OK
content-disposition: attachment; filename="192.0.2.123_diagnostics-dump_29811b9e-2afc-11eb-ae01-
↳bc0fa700190c.bin"
content-type: application/octet-stream

{binary data}
```

**statuscode 200** No error

## GET /api/v1/sensor/telemetry

GET 169.254.198.184/api/v1/sensor/telemetry  
Get the sensor telemetry information

```
GET /api/v1/sensor/telemetry HTTP/1.1
Host: 169.254.198.184

HTTP/1.1 200 OK
content-length: 150
content-type: application/json

{
  "input_current_ma": 758,
  "input_voltage_mv": 23606,
  "internal_temperature_deg_c": 45,
  "phase_lock_status": "DISABLED",
  "timestamp_ns": 2962666299310
}
```

**status code 200** No error

**Description** Returns JSON-formatted response that provides sensor system state information. This includes the FPGA **Timestamp** in **ns** (Nanoseconds) at which the information was collected from the FPGA, **Lidar Input Voltage** in **mv** (Millivolt), **Lidar Input Current** in **ma** (Milliamp), **Internal Temperature** of the sensor in **°c** (Degree Celsius) and **Phase Lock status** namely **LOCKED**, **LOST**, **DISABLED**..

---

**Note:** Internal temperature can only be measured with Rev 06 and above sensors.

---

---

**Note:** **Phase lock** output will not indicate loss of lock if the PTP source is lost.

---

# 3 API Changelog

---

## Version v2.3.0

Date 2022-04-15

### Description

#### "Added"

- Add additional options for config parameter udp\_profile\_lidar, refer to [Sensor Configurations](#).
- Add new TCP command get\_telemetry, refer to [Sensor Configuration and Calibration](#).
- Add the following GET HTTP Commands (Refer to [Sensor Metadata](#) for more information):
  - /api/v1/sensor/metadata/sensor\_info
  - /api/v1/sensor/metadata/lidar\_data\_format
  - /api/v1/sensor/metadata/beam\_intrinsics
  - /api/v1/sensor/metadata/imu\_intrinsics
  - /api/v1/sensor/metadata/lidar\_intrinsics
  - /api/v1/sensor/metadata/calibration\_status
  - /api/v1/sensor/metadata
  - /api/v1/sensor/telemetry
  - /api/v1/time/sensor
  - /api/v1/sensor/alerts

## Version v2.2.0

Date 2021-12-18

### Description

#### "Added"

- Add config parameter udp\_profile\_lidar, udp\_profile\_imu and their documentation
- Add initialization\_id to get\_sensor\_info TCP command
- Add columns\_per\_packet to get\_config\_param TCP command

#### "Changed"

- The fields base\_pn, base\_sn, and proto\_rev in get\_sensor\_info TCP command have been cleared

**Version v2.1.3****Date** 2021-10-22**Description****"Added"**

- Added PN support

**Version v2.1.2****Date** 2021-07-16**Description****"Added"**

- Add support for minor hardware revisions

**Version v2.1.1****Date** 2021-06-21**Description****"Added"**

- Add configuration parameter `signal_multiplier` and its documentation

**"Removed"**

- Remove deprecated TCP command `set_data_dst_ip`
- Remove deprecated TCP command `get_data_dst_ip`
- Remove deprecated TCP command `set_udp_port_lidar`
- Remove deprecated TCP command `set_udp_port_imu`
- Remove deprecated TCP command `get_lidar_mode`
- Remove deprecated TCP command `set_lidar_mode`
- Remove deprecated TCP command `get_config_file_path`
- Remove deprecated TCP command `set_auto_start_flag`
- Remove deprecated TCP command `get_auto_start_flag`
- Remove deprecated TCP command `get_watchdog_status`

**"Changed"**

- Fixed azimuth\_window parameter logic behavior. Notable changes:
  - [0,0] now outputs only a single column instead of all columns.
  - [1,2] results in sensor startup failure and an alert because there are no valid output columns.

## Version v2.0.0

Date 2020-11-20

### Description

#### "Added"

- Add TCP command `get_lidar_data_format`.
- Add in `azimuth_window` documentation.
- Add in commands `phase_lock_enable` and `phase_lock_offset` and their documentation.
- Add in verbose responses to parameter validation for TCP commands.
- Add in command `save_config_params` which supersedes the deprecated command `write_config_txt`, which will be deleted in future firmware.
- Add in command `get_config_param active` in favor of the deprecated command `get_config_txt`, which will be deleted in future firmware.
- Add in new STANDBY and WARMUP statuses.
- Add in parameter `operating_mode` in favor of the deprecated parameter `auto_start_flag`, which will be deleted in future firmware.
- Add in parameter `udp_dest` in favor of the deprecated parameter `udp_ip`, which will be deleted in future firmware. This is to be consistent with the `set_udp_dest_auto` parameter and to reflect that valid values can be hostnames in addition to ip addresses.
- Add in HTTP GET `api/v1/diagnostic/dump` endpoint.

#### "Removed"

- Remove deprecated TCP command `set_udp_ip`.

#### "Changed"

- TCP command `get_beam_intrinsics` now returns: 1) `lidar_origin_to_beam_origin_mm`, distance between the lidar origin and the beam origin in millimeters; and 2) beam altitude and azimuth angle arrays with padded zeros removed.
- `azimuth_window` parameter now in terms of millidegrees and implemented CCW.
- Deprecate `api/v1/system/time/` HTTP API and its sub-APIs and replace with `api/v1/time/`

## Version v1.13.0

Date

### Description

#### "Added"

- Add TCP command `set_udp_dest_auto`
- TCP command `get_alerts`, includes more descriptive errors for troubleshooting

#### "Changes"

- Packet Status now called Azimuth Data Block Status and is calculated differently



- Packets with bad CRC are now dropped upstream and replaced with 0 padded packets to ensure all packets are sent for each frame.
- Return format of TCP command `get_time_info` updated

### "Removed"

- Removed reference to `window_rejection_enable`

### Version v1.12.0

#### Date

#### Description

### "Changes"

- Corrected IMU axis directions to match Sensor Coordinate Frame.
- Sensor Coordinate Frame section of sensor user manual for details on sensor coordinate frame. This change inverts IMU X, Y, and Z axis relative to v1.11.0.

### Version v1.11.0

#### Date 2019-03-25

#### Description

- Add section on HTTP API commands.
- TCP Port now hard-coded to 7501; port is no longer configurable.
- Update to SYNC\_PULSE\_IN and MULTIPURPOSE\_IO interface and configuration parameters (see details below).

#### Configuration parameters name changes:

- `pps_in_polarity` changed to `sync_pulse_in_polarity`
- `pps_out_mode` changed to `multipurpose_io_mode`
- `pps_out_polarity` changed to `sync_pulse_out_polarity`
- `pps_rate` changed to `sync_pulse_out_frequency`
- `pps_angle` changed to `sync_pulse_out_angle`
- `pps_pulse_width` changed to `sync_pulse_out_pulse_width`

#### New configuration parameters:

- `nmea_in_polarity`
- `nmea_ignore_valid_char`
- `nmea_baud_rate`
- `nmea_leap_seconds`

#### Configuration parameters option changes:

- `timestamp_mode` - `TIME_FROM_PPS` changed to `TIME_FROM_SYNC_PULSE_IN`

- multipurpose\_io\_mode (formerly pps\_out\_mode) - OUTPUT\_PPS\_OFF changed to OFF
- OUTPUT\_FROM\_PPS\_IN\_SYNCED changed to OUTPUT\_FROM\_SYNC\_PULSE\_IN - Removed OUTPUT\_FROM\_PPS\_DEFINED\_RATE - Added INPUT\_NMEA\_UART

**TCP command changes:**

- **Added commands:**

- get\_time\_info

- **Changed commands:**

- get\_config\_txt (returned dictionary keys match parameter changes)

- **Removed commands:**

- set\_pps\_in\_polarity
- get\_pps\_out\_mode
- set\_pps\_out\_mode
- get\_timestamp\_mode
- set\_timestamp\_mode

Polarity changes: \* sync\_pulse\_in\_polarity was corrected to match parameter naming. \*  
sync\_pulse\_out\_polarity was corrected to match parameter naming.

**Version v1.10.0**

**Date** 2018-12-11

**Description**

**"Added"**

- Add get\_alerts, pps\_rate and pps\_angle usage commands and expected output.

**"Removed"**

- Remove all references of pulse\_mode.
- Remove TCP commands prior to v1.5.1.

**Version v1.9.0**

**Date** 2018-10-24

**Description**

**"Changes"**

- No TCP command change.

**Version v1.8.0**

**Date** 2018-10-11

**Description**

- get\_sensor\_info command gives INITIALIZING, UPDATING, RUNNING, ERROR and UNCONFIGURED status.

**Version v1.7.0**

**Date** 2018-09-05

**Description**

**"Changes"**

- No TCP command change.

**Version v1.6.0**

**Date** 2018-08-16

**Description**

**"Added"**

- Add `get_sensor_info` command gives `prod_line` info.